



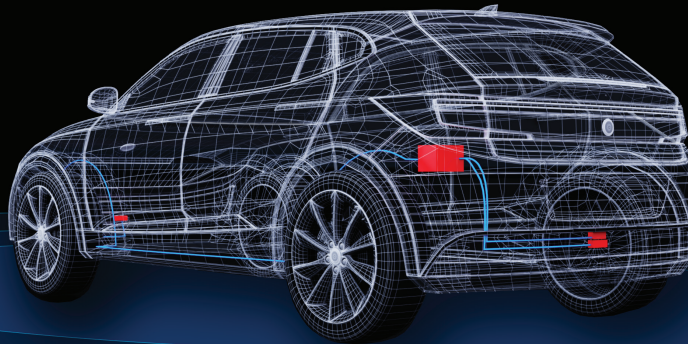


User Guide

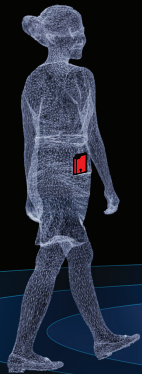


720-733-2348 | sales@vaistech.com | www.vaistech.com

Replacing the Battery


- 1 Insert a pin or paperclip into front cover opening

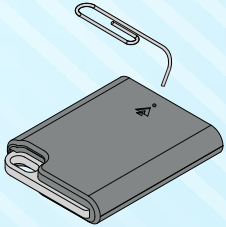


- 2 Push down on pin opening and slide front cover down

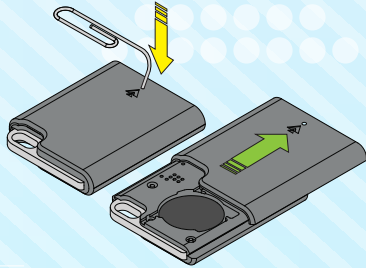


- 3 Replace battery (CR 1632)

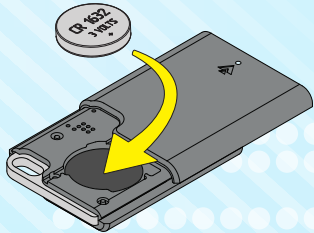

- 4 Slide front cover up until it clicks

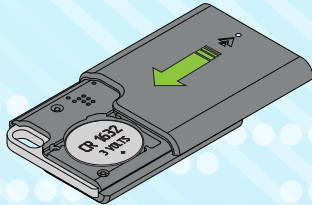

If your Key Tag was damaged or lost please contact VAIS Technology

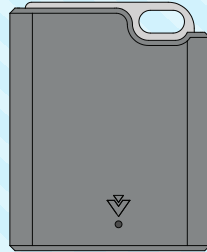

✉ sales@vaistech.com
🌐 www.vaistech.com



For complete warranty information visit:
www.vaistech.com/download/15244

To request a paper warranty copy please contact us:

VAIS Technology
8811 American Way
Suite 125
Englewood, CO 80112
720-733-2348
sales@vaistech.com

VAIS Technology is not responsible for or liable for any installation cost, property loss, damages whatsoever, including but not limited to, any consequential damages, incidental damages, loss of time, loss of earnings, commercial loss, loss of economic opportunity and the like that may or may not be resulted from the operation of the SEER product(s). Manufacturer does offer a limited warranty to replace or repair the control module. See Warranty for more information.